



F18 IOT

App Quick Start

Download APP and Start



WinPower View



Android QR Code




iOS QR Code


- Search the **WinPower View** in APP store or scan the QR code for downloading and installing
- Register an account
- Log in the APP



Homepage

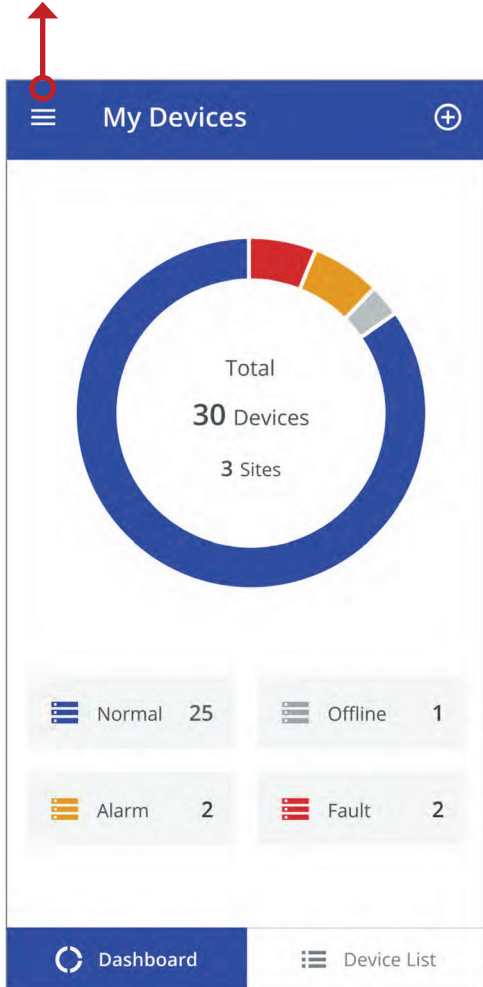Navigate

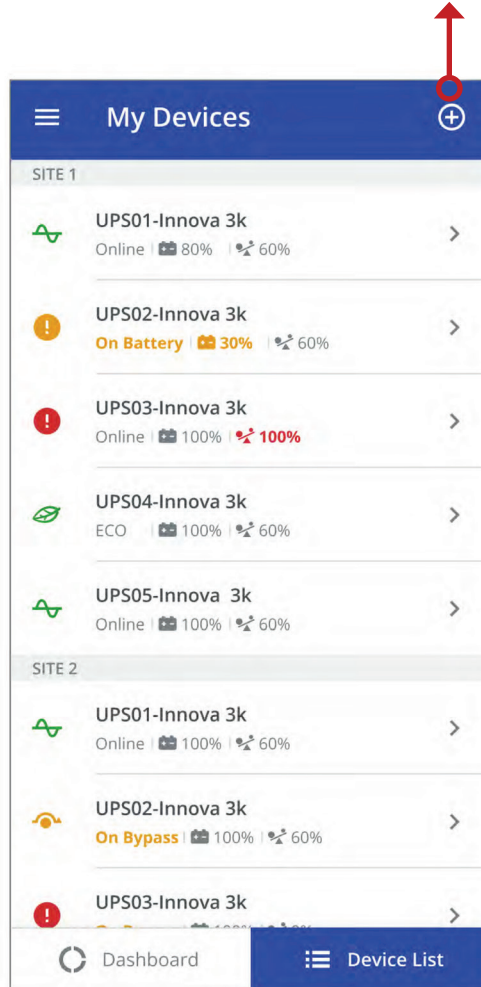


Add Device




- View the status of added devices
- Tap the device bar to view details
- Long press the device bar to delete device
- Tap  to overlay navigation bar
- Tap  to add device

Device Details

Remove or Rename Device

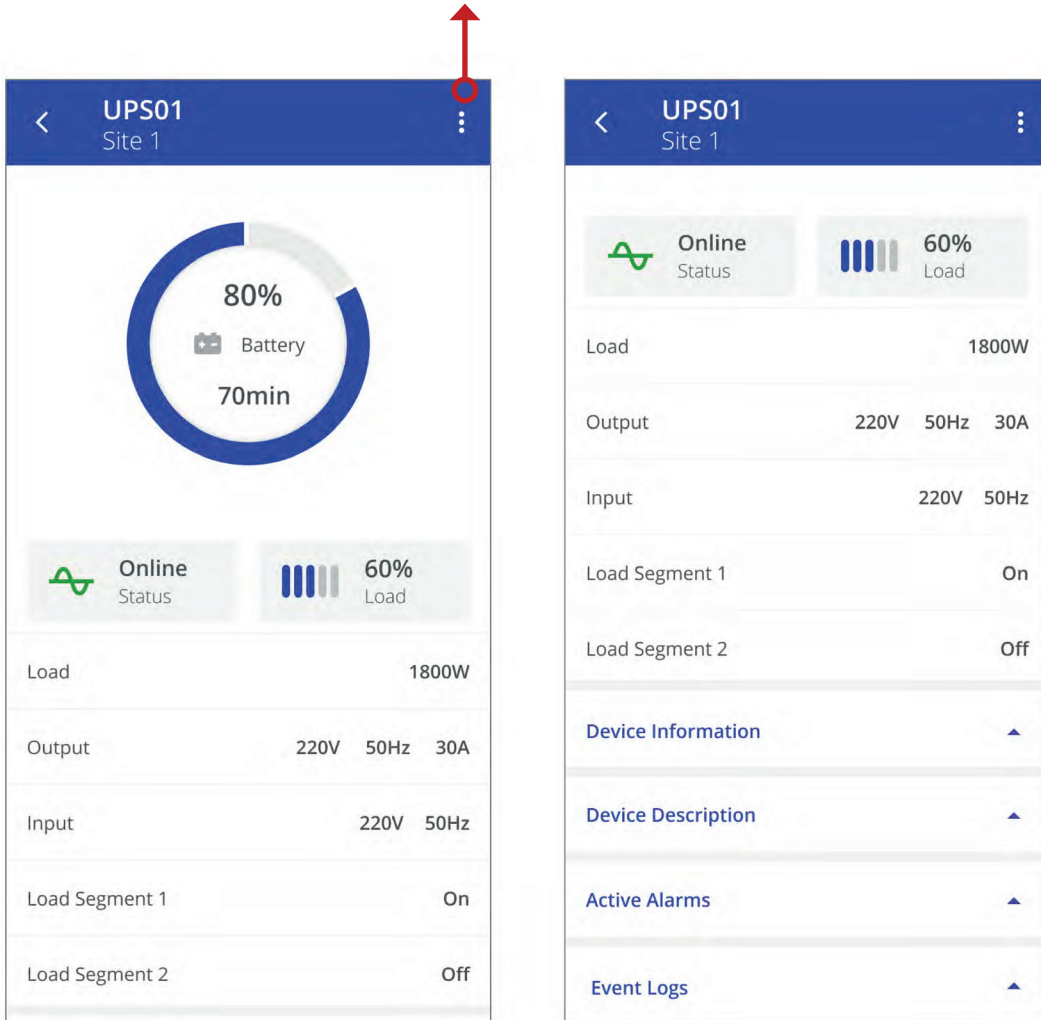


- View device detail data
- If no data, please check the device's network and IoT status on its HMI
- Tap  to remove/rename device


Add Device





Serial Number

- Find the QR code label on the machine

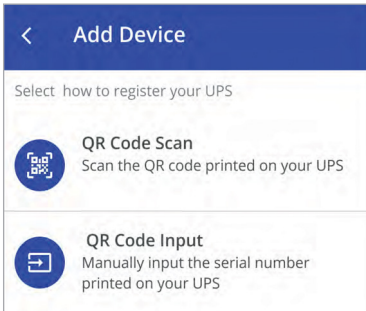


- Tap  on homepage
- Select scan or enter the serial number

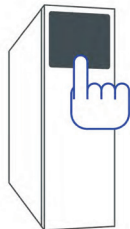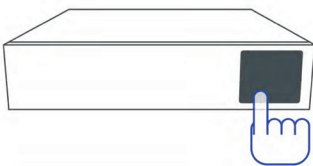


- Connect the device to the network
- Power on
- Operate device's HMI, select IoT function enabled


Add Device

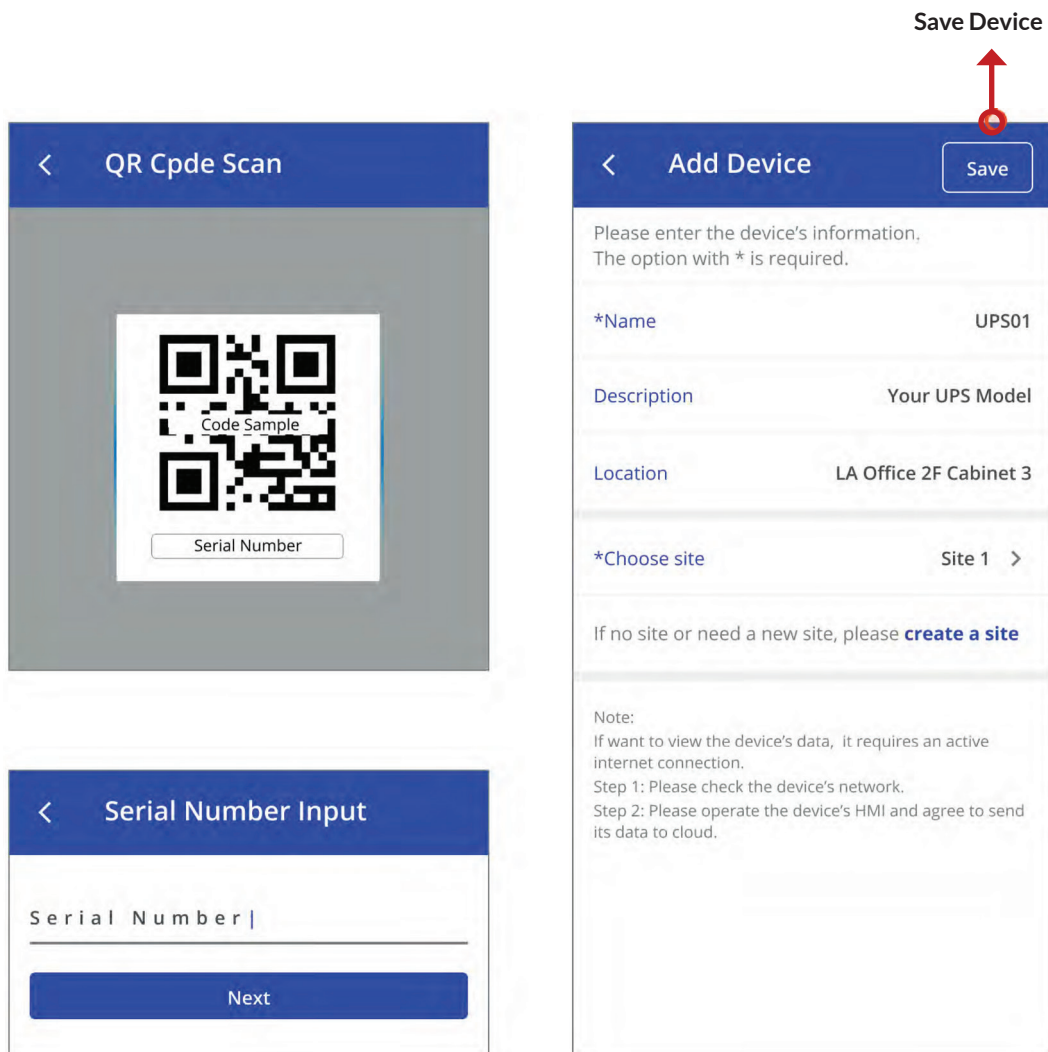



- Scan or enter the S/N barcode
- Edit the device's name and description
- Choose or create a site for the device
- Tap **SAVE** to save the device

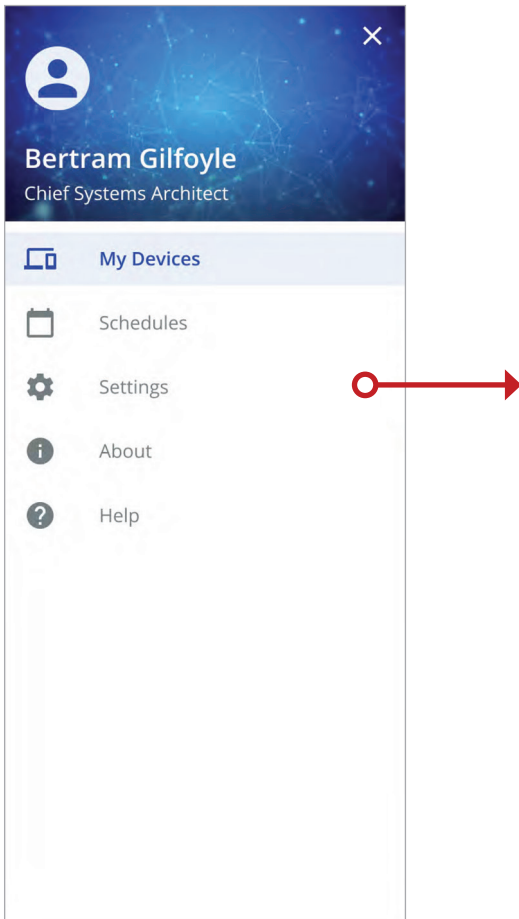

Navigation Bar





- Tap  on top left corner to overlay navigation bar
- Navigate to different areas

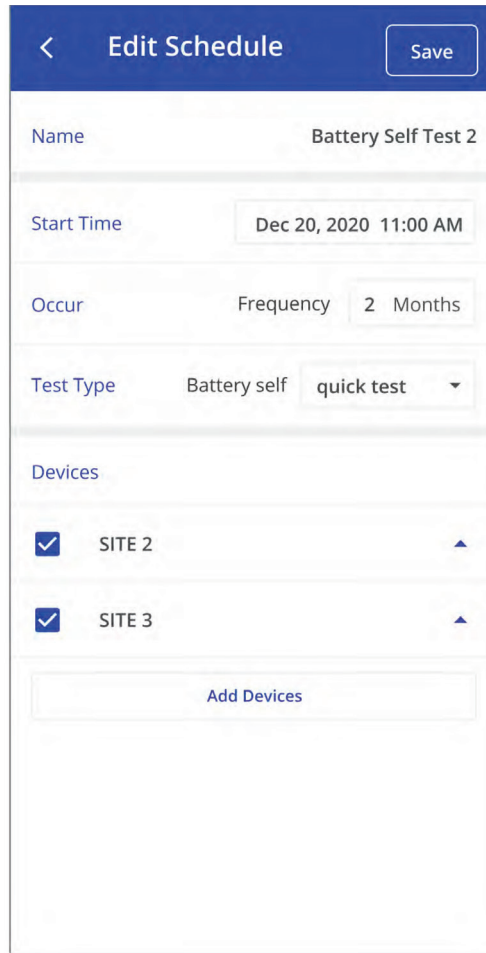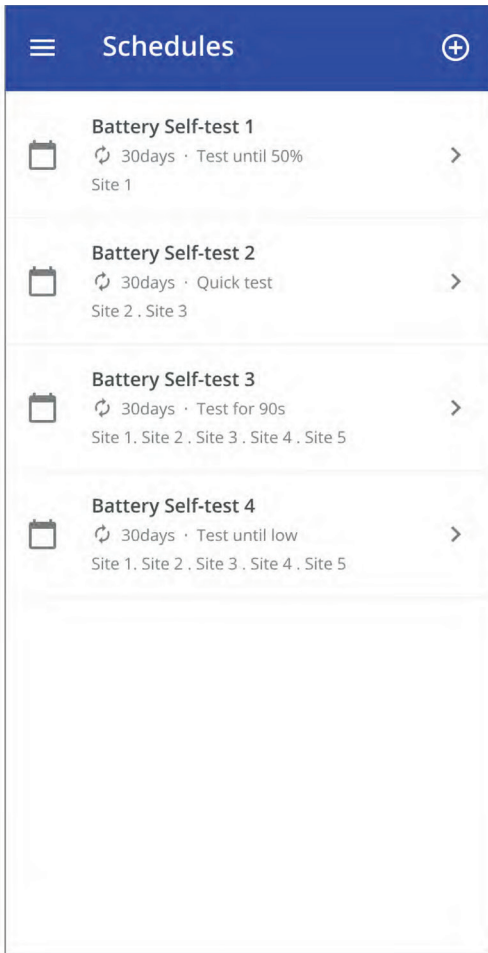Schedules




- Tap  to add battery test schedule
- Tap schedule bar to edit schedule
- Long press schedule bar to delete
- Tap  to save the schedule

Settings

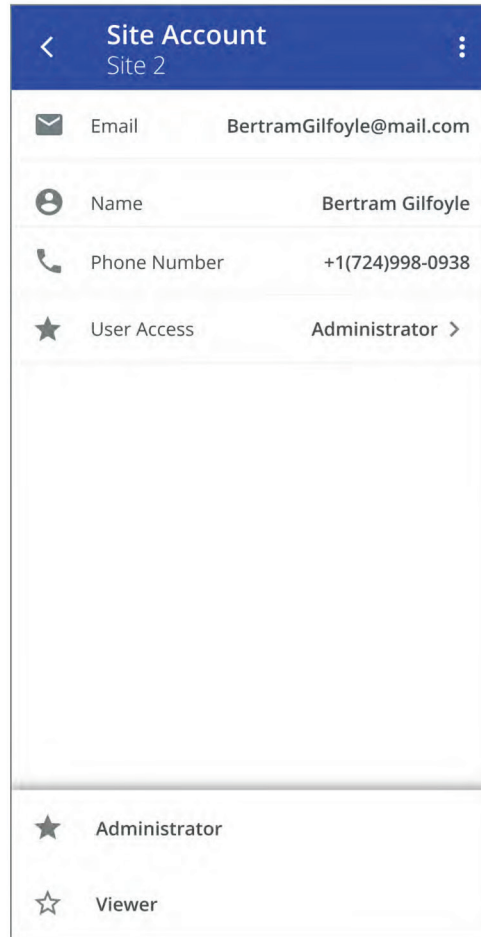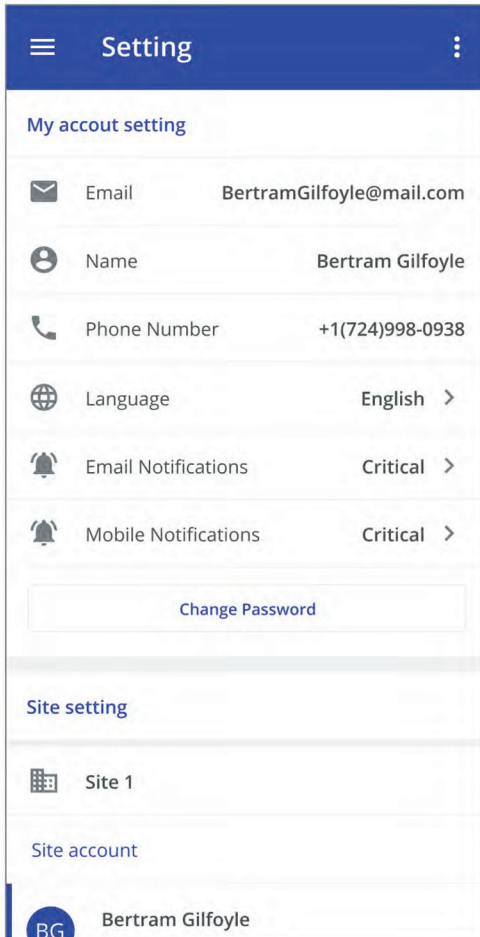

- Account setting
- Create/remove/edit site
- Invite/remove user
- Account access control

About & Help

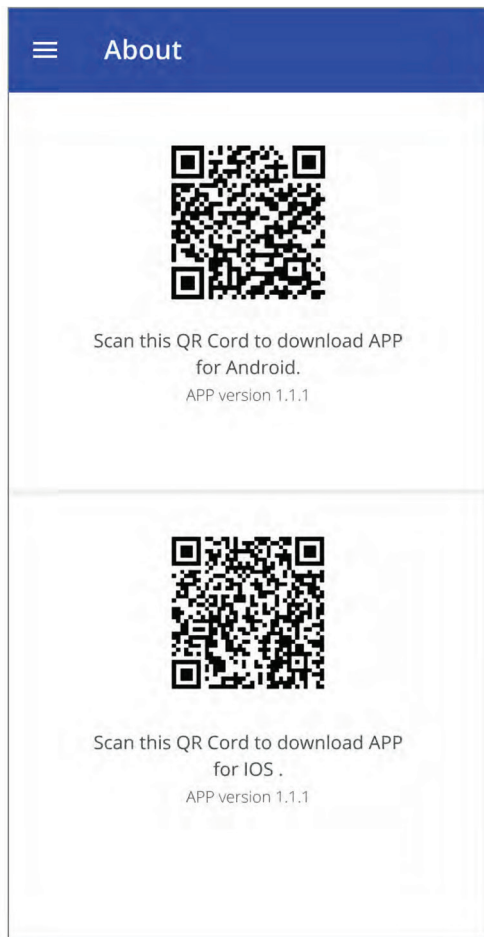

- Share APP QR code
- Tap Help bar on the navigation bar to view the APP guidance